

ENERGY BOOSTER II

NEGATIVE EARTH



FEATURES

- HIGH-POWER ELECTRONIC IGNITION MODULE
- COMPATIBLE WITH 6 OR 12 VOLT ELECTRICS
- AVAILABLE FOR POSITIVE & NEGATIVE EARTH ELECTRICS
- COIL & CONTACT-BREAKER IGNITION SYSTEMS ONLY
- NO MORE BURNING OF CONTACT-BREAKER POINTS
- CONDENSOR NOT REQUIRED
- LESS MAINTENANCE
- BETTER STARTING
- SMOOTHER RUNNING ENGINE
- IMPROVED COMBUSTION
- IMPROVED FUEL ECONOMY & LOWER EMISSIONS
- EASY TO FIT, ONLY FOUR WIRES TO CONNECT
- ORIGINAL CONNECTIONS CAN BE EASILY RESTORED
- STATIC TIMING & POWER LIGHTS INCLUDED
- FULLY ENCAPSULATED
- COVERED BY MANUFACTURER'S FIVE-YEAR WARRANTY
- SIZE(mm): 80 LONG x 40 WIDE x 20 DEEP, WEIGHT: 110g (INC. WIRES)

APPLICATIONS

- ANY PETROL ENGINE WITH COIL & CONTACT-BREAKER
- ENGINES WITH NO DISTRIBUTOR, BUT NOTE THAT ONE UNIT PER CONTACT-BREAKER IS REQUIRED (APPLIES TO MOST MOTORCYCLES)

NEGATIVE EARTH ENERGY BOOSTER KIT COMPRISES:

- ONE IGNITION MODULE (BLACK ABS IMPACT-RESISTANT CASE)
- ADHESIVE CABLE-TIE MOUNTING BASE
- SIX CRIMP TERMINAL CONNECTORS:
1 RING, 1 PIGGYBACK, 2 FEMALE SPADE & 2 MALE SPADE
- FIVE CRIMP TERMINAL INSULATORS
- FOUR SMALL BLACK TIE-STRAPS
- TWO LARGE BLACK TIE-STRAPS

NEGATIVE EARTH

INSTALLATION INSTRUCTIONS:

BEFORE FITTING, PLEASE ENSURE THAT YOU HAVE THE CORRECT POLARITY IGNITION MODULE FOR YOUR VEHICLE'S ELECTRICS.
FAILURE OF A MODULE CONNECTED TO REVERSE POLARITY CANNOT BE GUARANTEED.

The easiest way to check the polarity is to examine the battery to find out which terminal connects to the chassis:

If it is the **+** (or **red**) terminal then the polarity is positive earth.

The positive earth module has a **green** wire.

If it is the **-** (or black) terminal then the polarity is negative earth.

The negative earth module has a **yellow** wire.

1. Find a suitable place to mount the ignition module, near to the ignition coil but away from the direct heat of the exhaust system or radiator pipes. Do not strap directly to the ignition coil.
2. Secure the ignition module to the chassis/frame using one or more large cable ties. An adhesive mounting base is provided; this can be affixed to one side of the module and the cable tie passed through and around the module and frame. If necessary drill two 5mm holes (on on each side of the module) and pass the tie-strap through and around the module case. Alternatively, strong double-sided tape or Velcro can be used. Do not completely wrap the module in foam rubber.

Wiring instructions:

1. First check if 4(c) below applies. If not, proceed as follows.
Remove the connector from the **-** or CB terminal of the ignition coil (usually the black/white wire). This should be the wire coming from the contact-breaker. Reconnect this to the **yellow** wire from the ignition module. Any other wires on the **-** or CB terminal of the ignition coil should be left in place (for example: electronic tachometer feed wire).
2. First check if 4(c) below applies. If not, proceed as follows.
connect the **blue** wire from the ignition module to the **-** or CB terminal of the ignition coil.
3. Connect the **black** wire to a good earth point on the frame or chassis.
This can be directly to the battery **-** terminal.
4. Connect the **red** wire from the ignition module as follows
(Refer to workshop or owner's manual wiring diagram, if you are unsure which one applies).
 - (a) For vehicles without a ballast resistor, connect the **red** wire to the **+** or SW terminal of the ignition coil (see fig. 1 / 1a).
 - (b) for vehicles with a ballast resistor which connects between the ignition switch & the **+** or SW terminal of the ignition coil, connect the **red** wire to the ignition switch terminal of the ballast resistor (see fig. 2 / 2a).
 - (c) For vehicles with a ballast resistor which wires between the **-** or CB terminal of the ignition coil & the contact-breaker, disconnect this wire from the ballast resistor & connect to the **yellow** wire from the ignition module. Connect the **blue** wire from the ignition module to the ballast resistor. Connect the **red** wire to the **+** or SW terminal of the ignition coil (see fig. 3 / 3a).

The condenser (inside the distributor) may be left in place but it is no longer required for the ignition module to function correctly. It may be left connected across the contact-breaker (as standard) or disconnected, as desired. The installation is now complete. Secure & protect the wires using sleeving, insulating tape and tie-straps, as required.

CIRCUIT DIAGRAMS

NEGATIVE EARTH

STANDARD IGNITION SYSTEMS

WITH IGNITION MODULE

FIG. 1

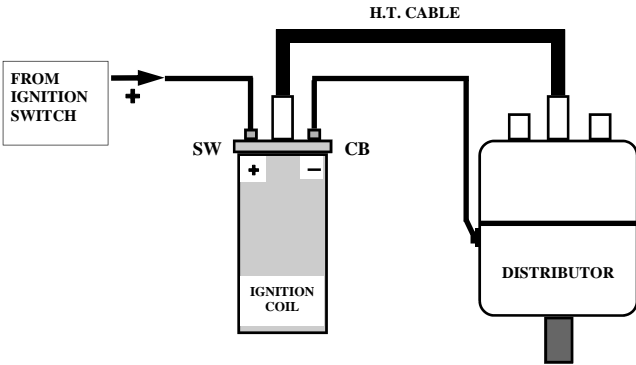


FIG. 1a

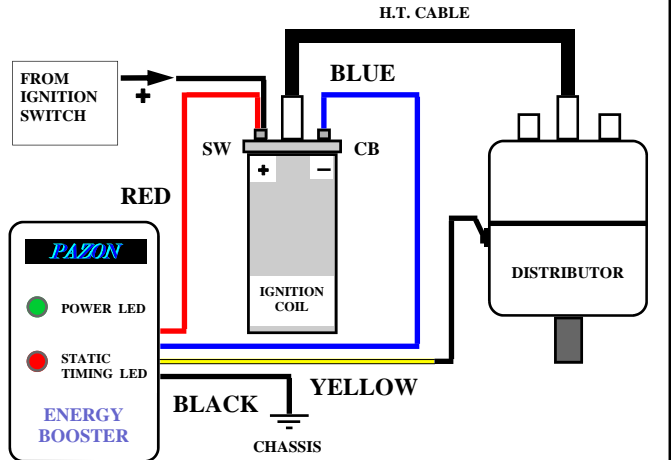


FIG. 2

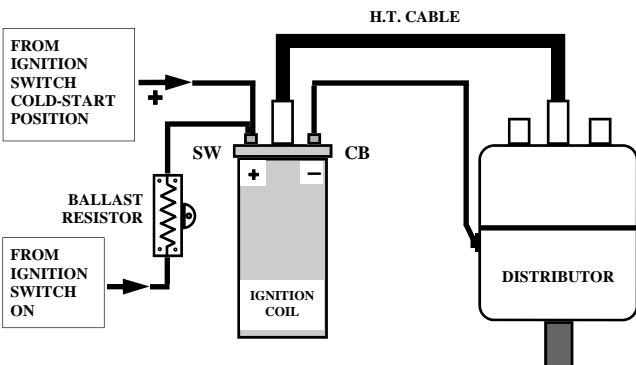


FIG. 2a

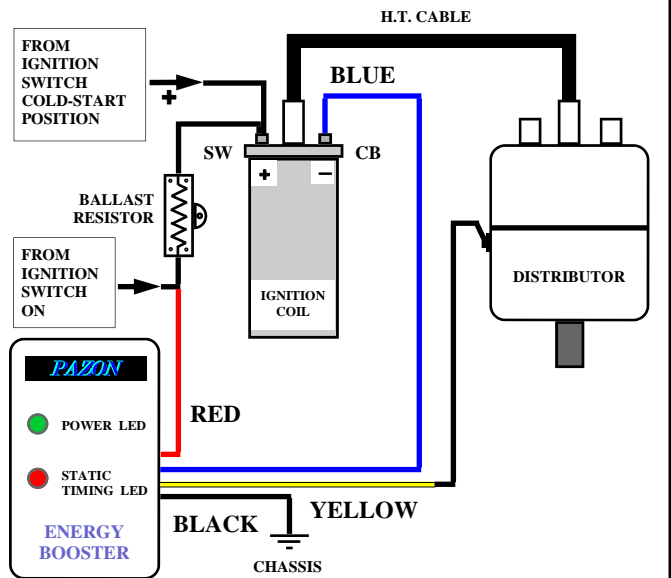


FIG. 3


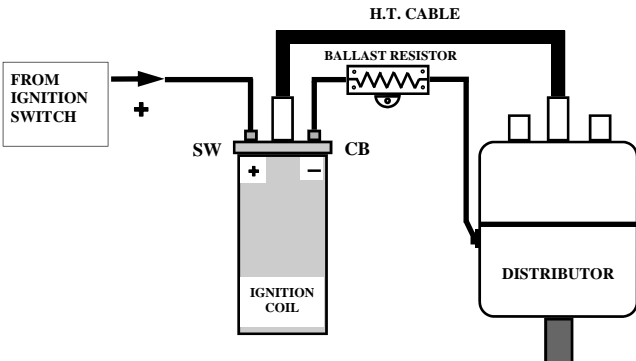


FIG. 3a

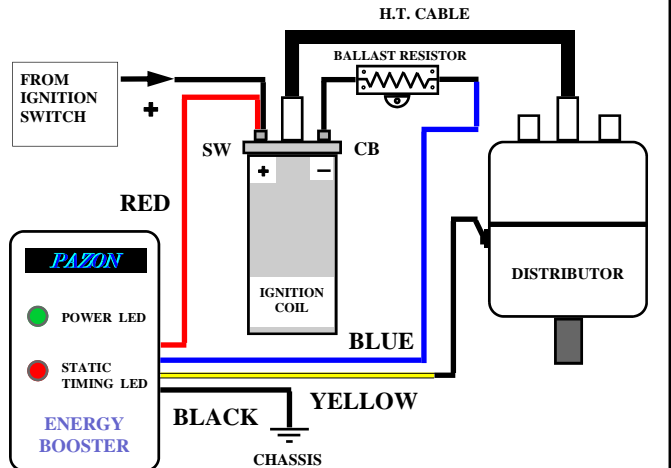

● GREEN LED "ON" INDICATES POWER TO THE MODULE (IGNITION "ON")

● RED LED "ON" INDICATES CONTACTS OPEN, "OFF" INDICATES CONTACTS CLOSED

PAZON ENERGY BOOSTER - SUPPLEMENTARY NOTES (NEGATIVE EARTH)

WIRE FUNCTIONS

- BLACK WIRE EARTH WIRE FOR THE IGNITION MODULE. THIS SHOULD BE CONNECTED TO A GOOD EARTH POINT. THIS CAN BE THE BATTERY NEGATIVE TERMINAL.
- RED WIRE 6 OR 12 VOLT POSITIVE FEED TO THE IGNITION MODULE FROM THE IGNITION SWITCH.
- BLUE WIRE IGNITION COIL LOW-TENSION SWITCHING OUTPUT. CARRIES THE IGNITION COIL CURRENT AND CONNECTS TO THE — OR CB TERMINAL OF THE COIL. BALLAST RESISTOR MUST BE LEFT IN THE CIRCUIT, IF FITTED.
- YELLOW WIRE CARRIES A SMALL CURRENT TO ONE SIDE OF THE CONTACT-BREAKER. THE OTHER SIDE OF THE CONTACT BREAKER CONNECTS TO EARTH INSIDE THE DISTRIBUTOR. THE CLOSING & OPENING OF THE CONTACTS SIGNALS TO THE IGNITION MODULE TO SWITCH THE IGNITION COIL ON & OFF.

IGNITION TIMING

The *Pazon* Energy Booster module does not affect the ignition advance/retard. Therefore there is no need to alter the timing. However, a regular check on the timing will help your engine to perform better & enable you to get the best out of the ignition module. All normal methods of timing can still be used, but the ignition module features a red static timing l.e.d. (light emitting diode) which makes timing very easy.

Refer to your workshop or owner's manual for the correct contact-breaker gap and static timing figure. Remove the distributor cap & check the contact-breaker gap with the heel on the peak of one of the lobes of the distributor shaft, using feeler gauges. If necessary, adjust to the correct gap (for example: 0.015").

With the ignition module fitted, the gap has little effect on the spark energy, smaller gaps can be used on high revving engines, to help reduce contact bounce.

The spark plug gaps should be set as standard; no improvement will be found by opening them up. A small increase in tickover may occur due to improved combustion. This may affect automatic transmission vehicles. If necessary, this can be reduced by adjusting the carburettor idle speed screw.

Next, position the engine to the correct static timing figure (for example: 10° btdc). Slacken off the distributor pinch bolt. Turn the ignition switch to "on" - the green l.e.d. on the ignition module should be on. Rotate the distributor body slowly until the contact-breaker points are just beginning to open. The exact point will be indicated as soon as the red l.e.d. on the ignition module turns on. Tighten the distributor pinch bolt.

Turn the ignition switch off & replace the distributor cap. With the ignition module fitted there will be no burning of the contact-breaker points. New contact-breakers should be checked & adjusted after 500 miles to compensate for bedding in of the heel. New contact-breakers should last 30,000 miles or more.

Vehicles fitted with electronic tachometer/rev-counter

Many vehicles have the tachometer connected into the wire from the contact-breaker & the ignition coil. With the ignition module fitted, the signal from the contact-breaker wire will be too small to trigger the tachometer.

The feed to this must be connected to the ignition coil low-tension circuit, l.e. from the — or CB terminal of the ignition coil.

Radio suppression

Standard radio suppression components can be used with this unit.

Fault finding

Check that the earth/chassis connection is good and clean. A bad earth will produce misfiring.

Good quality connections must be made, twisted wires are unsatisfactory. Good terminal joints are required, using crimped or soldered connectors. Check the green led is on when the ignition is on. If it is off or dim, this could be due to a bad ignition supply (check connections, battery, earth & switch).

With the ignition on, cranking the engine should make the red l.e.d. flash on & off.

If not, check the connection between the distributor & the yellow wire.

Also, check that the points have not completely closed up.

You can test the ignition module by touching the yellow wire on & off the earth, the red l.e.d. should flash off & on. It should also produce a spark from the coil.